

Corporate



User Guide

# Table of Contents.


<u>Introduction.</u>	P1
<u>Pager Outlook.</u>	P1
<u>Standby Screen Description.</u>	P1
<u>Control Key Description:</u>	P2
<u>Status Indicator Description:</u>	P3
<u>Data Bank Indicator Description:</u>	P3
<u>Reading Message Key Operation:</u>	P4
<i>How to switch and select Data Bank:</i>	P4
<i>Reading Message:</i>	P4
<i>Unread message reminder display and alert:</i>	P5
<i>Time Stamp Description:</i>	P5
<i>Switching message display between 2 or 4 lines:</i>	P5
<u>Message Function Menu:</u>	P6
<i>How to pull up and select Message Function Menu:</i>	P6
<u>Main Function Menu:</u>	P7
<i>How to pull up and select Main Function Menu:</i>	P7
<i>How to start Graphic Game:</i>	P7
<i>How to set Alert Mode:</i>	P9
<i>How to Delete Messages in different Data Bank:</i>	P12
<i>How to Preset Clock Alarm:</i>	P13
<i>How to set Automatic Power ON / OFF Function:</i>	P14
<i>How to turn this pager Power OFF or ON:</i>	P14
<i>How to set Date and Time:</i>	P15
<i>How to set Password:</i>	P16
<u>Sub Function Menu:</u>	P17
<i>How to adjust Date display format:</i>	P17
<i>How to adjust Public Data Bank Alert Mode:</i>	P18
<i>How to adjust the Display Screen Contrast:</i>	P18
<u>When and How to replace battery:</u>	P19
<u>Troubleshooting Guide:</u>	P20
<u>Warning and Maintenance Guide:</u>	P21

## Introduction.


*Thank you for choosing our Alphanumeric Graphic Pager. Our pager is small in size but loaded with lots of powerful function and large display screen.*

*Please read and follow this User Guide to operate each feature of this pager.*

## Pager Outlook.

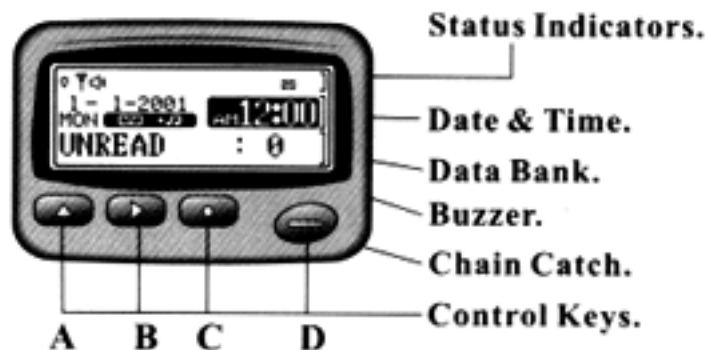

## Standby Screen Description:

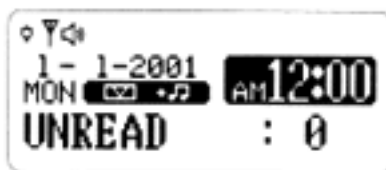

*This unit will automatically turn off display for power saving after no key operation. You can press any key to turn*

*on the Standby screen display and then you can switch between or select Data Bank to read message, get into Main or Sub Function Menu by Key operation while the Standby screen display.*

## **Control Key Description:**

### ***Main & Sub Function Menu Key Operation:***

**Key A:** - Adjust the digit or options.

**Key B:** - Move to the right function, category or digit.

**Key C:** - Pull up Main Function Menu.

- Select particular function / Enter adjustment.

- Press and hold at the standby screen to pull up Sub Function Menu.

**Key D:** - Escape from the current function.

- Press and hold to turn ON / OFF the back light.

### ***Reading Message Key Operation:***

**Key A:** - Escape from the existing Data Bank and return to the standby screen.

**Key B:** - Switch to the next message.

- Move to the next function of the Message Function Menu.

**Key C:** - Pull up Message Function Menu.

- Select particular function.












**Key D:** - Reading every page of the message in the selected Data Bank.

- Press and hold to turn ON / OFF the back light.


### ***Pager OFF Key Operation:***

**Key C:** - Press and hold until the pager turn ON.

## **Status Indicator Description:**


-  *Power ON indicator.*
-  *Automatic power ON / OFF function activated .*
-  *Signal receiving indicator.*
-  *Audio alert mode selected indicator.*
-  *Vibration alert mode selected indicator.*
-  *Alarm enabled indicator.*
-  *Security lock activated indicator.*
-  *Replace battery indicator.*
-  *Unread message indicator.*
-  *Duplicate message indicator.*
-  *Continue page indicator.*

## **Data Bank Indicator Description:**

-  *Unread Data Bank indicator.*
-  *Personal Data Bank indicator.*
-  *Locked Message Data Bank indicator.*
-  *NoteBook Data Bank indicator.*
-  *Public Message Data Bank 1 indicator.*  
*(Up to 8 Public Data Bank may be available, please consult with your Service carrier for details of broadcasting message service.)*

## Reading Message Key Operation:


### *How to switch and select Data Bank:*

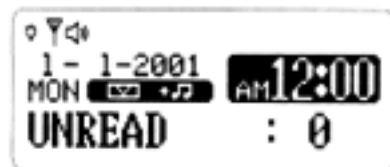

While the Standby Screen display, you can press the *Key A* to switch between the Data Bank of (**UNREAD**, **PERSONAL**, **LOCKED**, **NOTEBOOK** and **PUBLIC 1 to PUBLIC 8**).

\*\*\* Individual Data Bank won't display when it is empty.

### *Reading Message:*

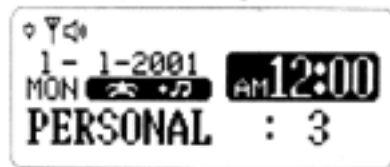

While the desire Data Bank display, you can press the *Key D* to select and starting to read message from the


selected Data Bank. Or you can press the *Key B* to search for the particular message in the selected Data Bank.

-By Pressing *Key B*, the screen will display the first page of each messages from the latest to the farthest one.

### *Unread message Description:*

All and only new personal message will store in the **UNREAD** Data Bank before you read it, and then it will be store in the **PERSONAL** Data Bank afterward.

### *Unread message reminder display and alert:*

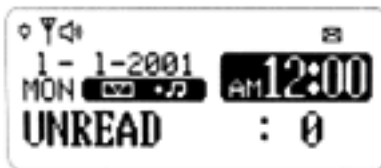


When ever there is one or more unread message, this pager will display the unread message indicator ☒ on the

top right corner of the screen and alert every six minutes with a short beep or vibration to remind you.

\*\*\* No alert reminder under the Silent Alert Mode.

### *Time Stamp Description:*

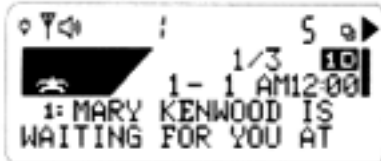

This pager will display a Time Stamp Screen in the 1st screen of each message.

☒ = **PERSONAL** Data Bank.

1/3 = 1st of the 3 messages in the Data Bank.


10 = Message paging channel.

1- 1 = Message received date.

AM12:00 = Message received time.

5 ☒ = Received this duplicate message 5 times.

### *Switching message display between 2 or 4 lines:*

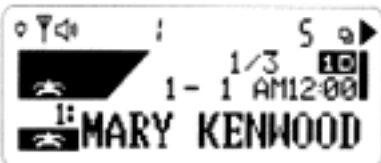


While you are reading, you can press and hold the **Key C** to switch the message display between 2 or 4 lines.


Each data bank display format are independently base on selection.

## Message Function Menu:

*How to pull up and select Message Function Menu:*

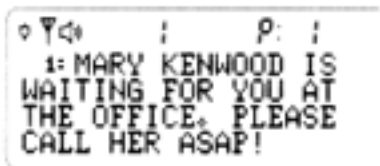

When ever this display any type of message, you can press **Key C** to pull up the Message Function Menu.

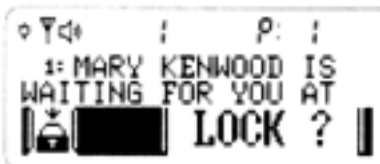

After you had pressed the **Key C**, the screen will display as the left screen.

Now you can press the **Key B** to switch between the option and then press **Key C** to select the function or **Key D** to escape from the Message Function Menu.

The optional functions for each Data Bank are different:

**PERSONAL:** [**LOCK ?**], [**NOTEBOOK**], [**DELETE ?**]

**LOCKED:** [**UNLOCK ?**]

**NOTEBOOK:** [**DELETE ?**]

**PUBLIC 1~8:** [**DELETE ?**]


\*\*\* Message Function Menu is not available in the

**UNREAD** Data Bank.

If you selected the [**LOCK ?**] or [**NOTEBOOK**] option, then the particular **PERSONAL** message will switch to the correspondent Data Bank. If you selected the [**UNLOCK ?**] option, then the **LOCKED** message will store back to **PERSONAL** Data Bank.

## Main Function Menu:

*How to pull up and select Main Function Menu:*

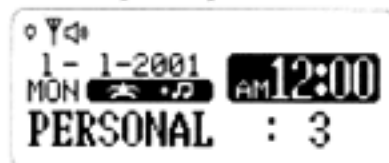


While the Standby Screen display, you can press **Key C** to pull up the Main Function Menu.

*How to start Graphic Game:*




While the left Screen display, you can press **Key C** to select to start the Graphic Game Menu.

This pager offering two entertaining Graphic Games, **LUCKY SEVEN** and **POKERS GAME**.

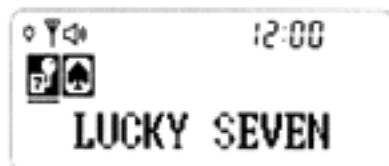


Please press **Key B** to switch between different Graphic Game and then press **Key C** to confirm selection.

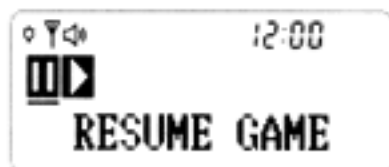

If this is not the first time selection, then you can choose from **RESUME GAME** or **START NEW GAME**.

*How to play Lucky Seven:*

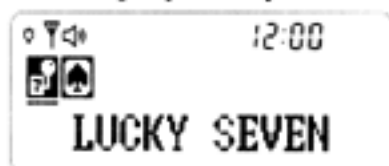

While the left Screen display, you can press **Key C** to select to start **LUCKY SEVEN**.



While the left screen display press **Key A** to adjust the playing point, and then press **Key C** to start the game.




After the wheel stopped spinning, then this unit will show the winning score according to the combination of the 3 patterns.




Then you can press any key from **Key A** to **Key C** to start another round, or press **Key D** to escape.

### *How to play Pokers Game:*

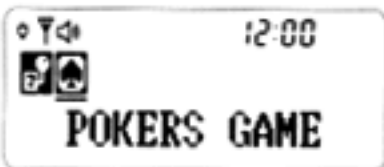


While the left screen display, you can press **Key C** to select to start **POKERS GAME**.

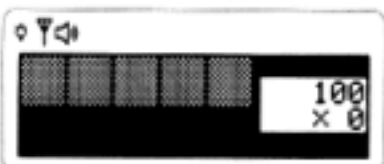


While the left screen display press **Key A** to adjust the playing point, and then press **Key C** to start the game.



or press **Key D** to escape.

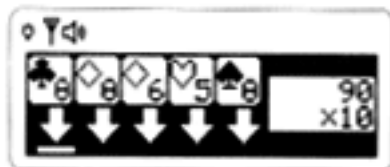

Then you can press **Key B** to switch to different card position and then press **Key A** to pick the card that you don't wanted to change. Then press **Key C** to change the card.

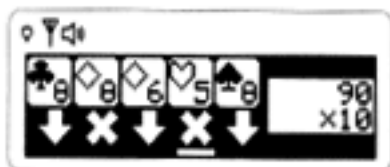

Then this pager will show the winning score according to the combination.



Then you can press **Key A** to **Key C** to start another round, or press **Key D** to escape.

**How to set Alert Mode:**



While the left Screen display, you can press **Key C** to select to display Set Alert Mode Menu.

**You can select from the Alert mode options of:**



= Alert with circulation of 10 different musical alert.



= 10 Different musical alert.



= 10 Different tone alert.



= 10 Different tone alert  
plus vibration.

You can press **Key A** to change and listen to different musical or tone alert and then press **Key C** to confirm your selection while the desire alert is playing.



= Short beep alert.



= Silent (Mute) alert.




= Continuous vibrating alert.






= Intermittent vibrating alert.



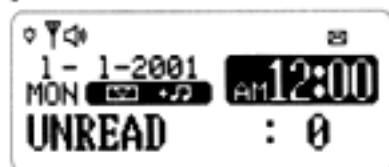





You can press **Key C** to confirm your selection while the desire alert mode is displaying or press **Key D** to escape from this Alert Function Menu.

After you have confirmed your selection, the pager will perform a demonstration of your selected alert mode.



 Audio or  Vibration  
Alert Mode Indicator will display on the top left corner according to your selection.

Also the different type of detail Alert Mode Indicator  will be display at the middle of the standby screen along each different Data Bank display.

-  = Circulate music alert mode.
-  = Music alert mode.
-  = Tone alert mode.
-  = Mixed vibration and tone alert mode.
-  = Short beep alert mode.
-  = Silent (Mute) alert mode.
-  = Continuous vibration alert mode.
-  = Intermittent vibration alert mode.

### *How to Delete Messages in different Data Bank:*



While the left Screen display, you can press **Key C** to select to display Delete Message Menu.

### *You can delete messages from individual Data Bank:*



You can press **Key B** to switch between options of **PERSONAL** or **PUBLIC** Data Bank.




While **DELETE PUBLIC** screen display, you can press **Key A** to switch between **PUBLIC 1 ~ 8** Data Bank.

Then you can press **Key C** to confirm your selection while the desire Data Bank is displaying.

\*\*\* Choice of Data Bank won't display when it is empty.



Then you can select to delete all messages or messages received how many day before today in the particular Data Bank.

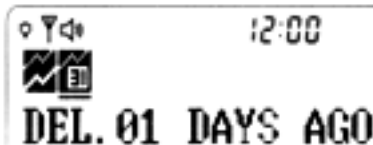

If you wish to delete message by day then you can press **Key A** to adjust the day from


01 to 60 days, and then press **Key C** to confirm.

### How to Preset Clock Alarm:



While the left Screen display, you can press **Key C** to select to display Alarm adjustment screen.


### You can preset up to 12 sets of clock alarm:

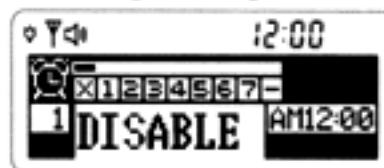

You can press **Key A** to switch between number 1 ~ 12 set alarm, press **Key B** to start the particular set of alarm

adjustment and the **DISABLE** wording will flash.

### Clock Alarm Function offer the following options:

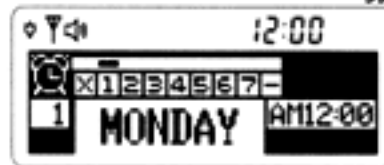

= The number 12 alarm of the 1 ~ 12 alarms.




= The alarm mode of the particular alarm.

Including: **Disable** (Alarm OFF), **Monday**, **Tuesday**, **Wednesday**, **Thursday**, **Friday**, **Saturday**, **Sunday** and **Everyday**.



= Alert time of the particular alarm.

Then you can press **Key A** to adjust each category or digit, **Key B** to move to the next category and **Key C** to confirm your adjustments. The  Alarm enabled indicator will appear on the top of the screen when 1 or more sets of alarm is enabled.

### How to set Automatic Power ON / OFF Function:



While the left Screen display, you can press **Key C** to select to display Automatic Power ON / OFF adjustment screen.



You can press **Key B** to switch between the ON and OFF time and press **Key A** to adjust the ON or OFF time.

And then press the **Key C** to confirm the adjustment.

Once this function was activated, the  Automatic Power ON / OFF Indicator will appear, and this pager will turn ON or OFF automatically according to the times.

\*\*\* This function will be deactivated when the ON and OFF time are the same.

### How to turn this pager Power OFF or ON:



While the left Screen display, you can press **Key C** to confirm to turn this pager power OFF.




After this pager is OFF, this power OFF screen will display when any key was pressed.

This pager can be turn ON by press and hold the **Key C** for 2 seconds, then this pager will turn ON with a self testing procedure and get into standby mode afterward.



## How to set Date and Time:




While the left Screen display, you can press **Key C** to select to display start adjust Date & Time.

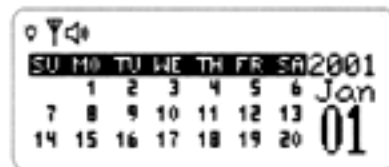

You can press **Key B** to switch between categories, and press **Key A** to adjust each category or digit.

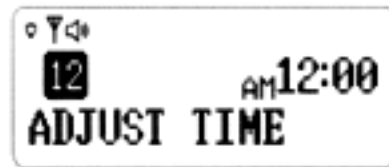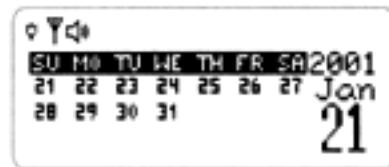



While adjusting the time, you can chose the time display format between **12** or **24** hours.

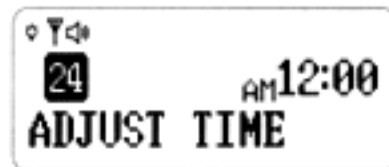



All the time related display will be self adjust according to your selected time display format.

And then press the **Key C** to confirm the adjustment.

### How to set Password:

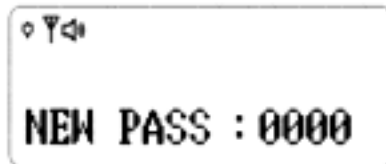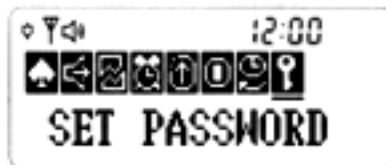


### How to turn off the password function:

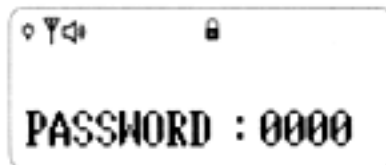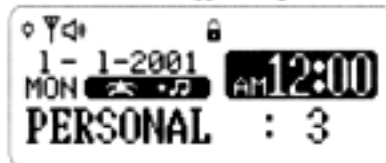

While the left Screen display, you can press **Key C** to select to display New Password input screen.

And then press the **Key A** and **Key B** to adjust the New Password to desire combination and then press **Key C** confirm the adjustment.


When the Password function is on, the  icon will display on top of the standby screen.

You will have to input the correct password before you can read any message or pull up the function menu.

When the password screen displays press the **Key A** and **Key B** to input the 4 digits Password, and then press **Key C** confirm.


## **Sub Function Menu:**

*How to pull up Sub Function Menu:*

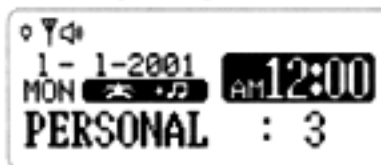


While the Standby Screen display, you can press and hold **Key C** until the Sub Function display.

*How to adjust Date display format:*

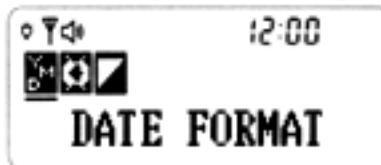

While the left Screen display, you can press **Key C** to select to display the Date display format options.

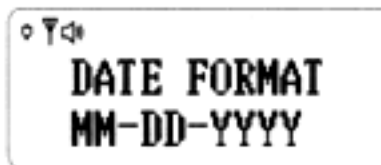


And then you can press the **Key A** to switch between the Date display format option, then press **Key C** to select.

**YYYY** = 4 digits of the year display.


**MM** = 2 digits of the month display.

**DD** = 2 digits of the date display.

### *How to adjust Public Data Bank Alert Mode:*

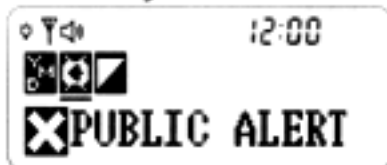

While the left Screen display, you can press **Key A** to switch option if you wanted the pager to alert when received **PUBLIC** message.

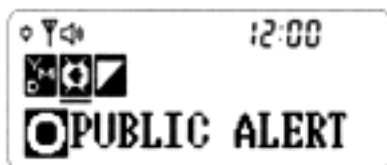


And then press the **Key C** to confirm the adjustment.

### *How to adjust the Display Screen Contrast:*



While the left Screen display, you can press **Key C** to display the contrast adjustment screen.

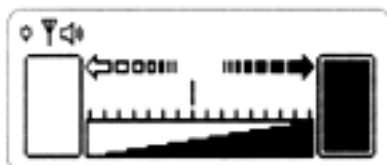


Then you can press the **Key B** to move the cursor to the right or left direction until you get your desire display contrast. And then press the **Key C** to

confirm your adjustment or **Key D** to escape from this function.

## **When or How to replace battery:**

### ***When to replace battery:***



When ever this Screen or the  Replace Battery Indicator display, which mean the voltage of the battery inside

this pager is getting too low for this pager to work normally. Please replace the battery as soon as possible.

### ***How to replace battery:***

Please follow the instruction below to replace the battery:

- 1) Turn the pager OFF.
- 2) Open up the battery cover.
- 3) Remove the old battery from the pager.
- 4) Follow the direction of the battery symbol inside the battery compartment and replace with a name brand New Alkaline Battery. If you insert the battery in wrong direction or replace with an old battery or take more 10 seconds to replace the battery, all of the memories and setting will be erased.
- 5) Put the battery cover back on.
- 6) Press and hold the **Key C** for 2 seconds to turn the pager ON.

**\*\*\* Warning:** If the battery hasn't been replaced after the replace battery warning, it may cause battery fluid leakage and irrevocable damage to the pager.

***(Damages caused by battery fluid leaking are not covered by the warranty).***

## **Troubleshooting Guide:**


### ***1) No display and pager can't turn ON:***

- > Check if the battery installed in wrong direction or replace with a new battery.
- > Check if the diameter of the battery over 10.3mm. If it is over, please replace with a new battery which is within 10.3mm in diameter.


### ***2) Pager didn't alert after received personal message:***

- > Check if the alert mode being set in silent mode.

### ***3) Pager didn't receive any message:***

- > Check if the  Replace Battery Indicator being display on the top of the screen.
- > Check if the pager had been turned OFF.
- > Check if the Auto. ON / OFF function being activated and the OFF period setting.

### ***4) Pager alert without receiving new message:***

- > Check if the clock alarm being activated by mistake or the alert time is incorrect.
- > Check if there is any unread message.
- > Check if the  Replace Battery Indicator being display on the top of the screen.

### ***5) If incase this pager encounter with any major problem, please consult with your local dealer.***

- \*\*\* Please don't try to disassemble, modify or repair this pager with any tool or any method by any unauthorised person or company.***

## **Warning and Maintenance Guide:**

- 1) Don't use any solvents to clean this pager!  
You can use a soft, dry clean cloth to clean the surface of this pager.*
- 2) Don't store this pager under extreme temperature, humidity or directly under sunlight.*
- 3) Don't apply strong shock, pressure to this pager or drop this pager.*
- 4) If this pager won't be used for a period of time, please remove the battery. Battery fluid leakage may damage this pager seriously.*
- 5) Don't try to disassemble, modify or repair this pager. (Incase encounter with any major problem, please consult with your local dealer.)*
- 6) Warranty doesn't cover damages caused by improper handling, abuse neglect, accidents, attempted disassembly, any false action doesn't follow this user's manual or any unauthorized alteration made to this pager by any person.*

*Version: 6100*