


**THE NEC  
FACTS REPLAY™ PAGER**

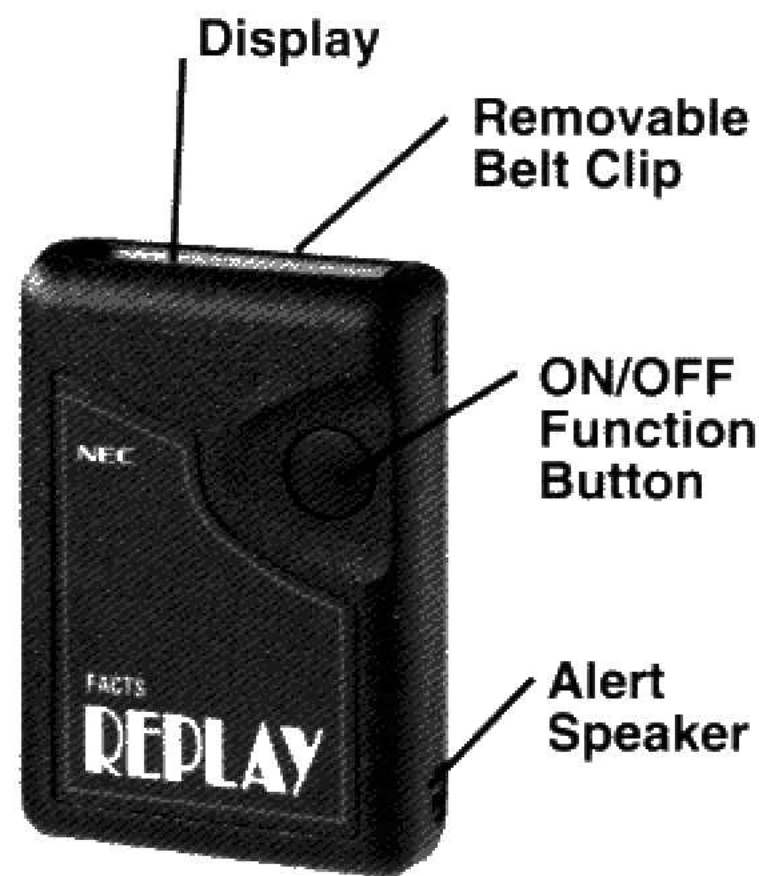

For your convenience, please read each set of instructions completely before beginning.

**1. TURNING PAGER ON:**

- Hold the button down until you hear a beep or feel the pager vibrate, then release the button.
- The pager is now on.

**2. TURNING PAGER OFF:**

- Hold the button down until you hear one beep and two (2) additional beeps. Quickly release the button and press it again, holding the button down until the word "OFF" is no longer displayed and the screen is blank.
- The pager is now off.

**3. SETTING THE CLOCK:**

- Turn pager off. (See Turning Pager Off)
- Hold the button down until you hear the first beep or feel the pager vibrate. Quickly release and immediately press and hold down button until the hour display starts to flash.
- While the hour display is flashing, press and release the button to advance the hour. Continue to press and release until the desired hour is displayed.
- Once correct hour is displayed, hold down button until first minute display flashes. Quickly push and release button until correct minutes are displayed.
- Hold down until second minute position flashes.
- Once correct time is reached, hold down button until flashing stops. Clock is set.

**4. CHANGING THE ALERT TONE:**

- With the pager turned on, hold the button down until you hear a beep. Immediately release, then begin pressing and releasing button to display the four (4) different alert options.
- |               |     |                        |
|---------------|-----|------------------------|
| <b>BEEP 1</b> | for | Beep alert             |
| <b>BEEP 2</b> | for | Musical alert          |
| <b>BEEP 3</b> | for | 2-tone/vibrating alert |
| .....         | for | Vibrating alert        |
- To select the alert displayed, simply release the button. The pager will automatically reset after 2 seconds.

**FOR ADDITIONAL ASSISTANCE CONTACT  
1-800-CALL-NMI (800-225-5664)**