


Stealth

User Manual

5.REPLACEMENT OF BATTERY

When “” icon appears on the display, it means the battery voltage is low. Replace the battery to ensure the pager can work properly. If you will not be using the pager for an extended period, remove the battery to prevent leakage of battery and damage to pager.


6. BACK LIGHT FUNCTION

When the pager is in standby mode or to read a message. Press the first button 2 seconds to turn on the backlight. Press the first button 2seconds again to turn it off.

- 3.8 Turn off pager
- 3.9 Setting of alert
- 3.10 Turn off the pager
- 3.11 Delete message display
- 3.12 Different sound alert setting display
- 3.13 Alarm setting display
- 3.14 Time setting display
- 3.15 Date setting display
- 4. Description of pager function
 - 4.1 Turn on the pager
 - 4.2 Turn off the pager
 - 4.3 Setting of Time and Date


- 4.4 Receive and store message
- 4.5 Check Message
- 4.6 Lock and delete and unlock message
- 4.7 Function setting
- 5. Replacement of battery
- 6. Back light function

1. EXTERNAL VIEW OF PAGER

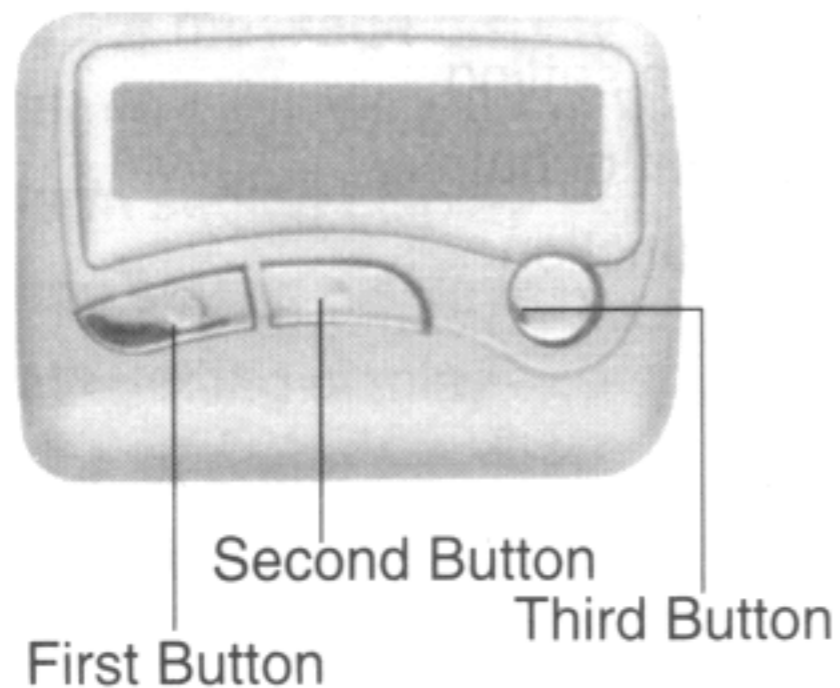





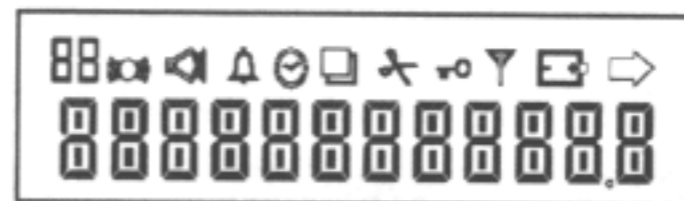





1.1 Description of status display

Below diagram is the status display of the pager.



1.2 Status of LCD display

-  Vibration alert mode
-  Sound alert mode
-  Alarm enable
-  Time setting indication
-  Duplicate message indication

-  Delete message
-  Message locked
-  Out of receiving area indication
-  Low battery indication
-  Continue page message indication


2. FUNCTION OF PAGER

- * Maximum store 12 messages and 10 locked messages
- * Maximum characters in each message: 20 characters
- * LCD display: 12 characters × 1 line + 1 line icon

- * Duplicate message indication
- * Unread message indication
- * Delete single/all message
- * 3 alarms setting
- * Contain 3 alert modes: music/vibration/silent mode
- * Low battery indication
- * Out of receiving area indication

3. DESCRIPTION OF DIFFERENT DISPLAY MODE


3.1 Pager is on standby mode with sound alert:

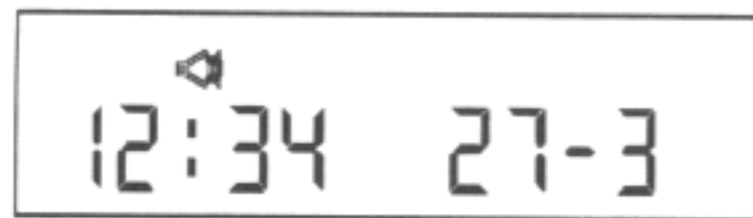


3.2 Unread message display:




3.3 Vibration alert display:

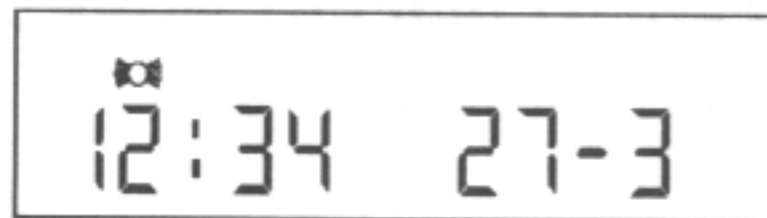


3.4 Silent alert display:

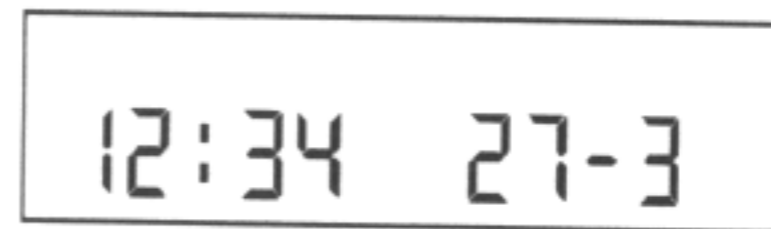

3.5 NO message receive display:

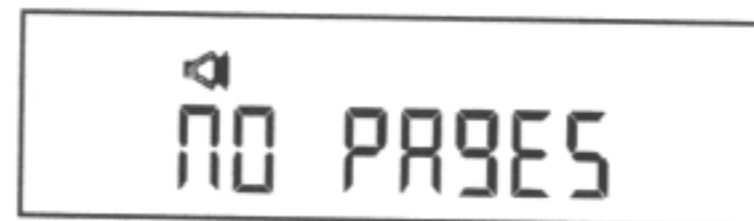

3.6 Out of receiving area display:

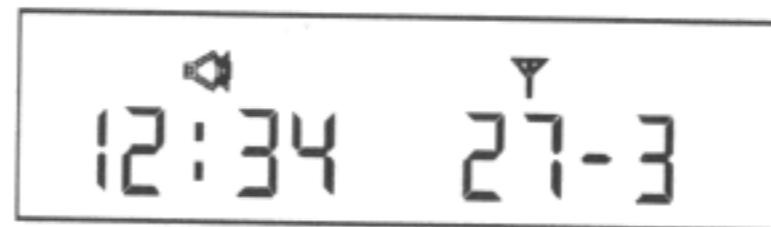

3.12 Different sound alert setting display:



3.13 Alarm setting display:



3.14 Time setting display:




3.15 Date setting display:




4. DESCRIPTION OF PAGER FUNCTION.

4.1 Turn on the pager

Open the battery door and place a 1.5V **AAA** battery into pager. The pager will turn on and all of the icon will be displayed. The pager sound 8 seconds. Then it will return to standby mode.

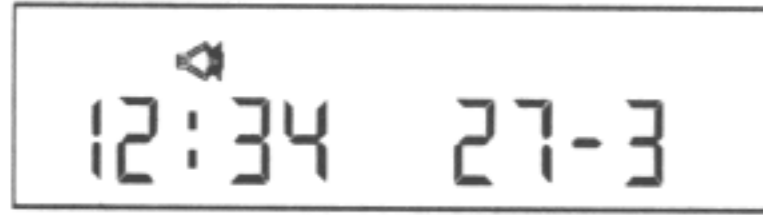

If the pager is turned off, press the third button. The pager sounds 8 seconds. Then it will return to standby mode.

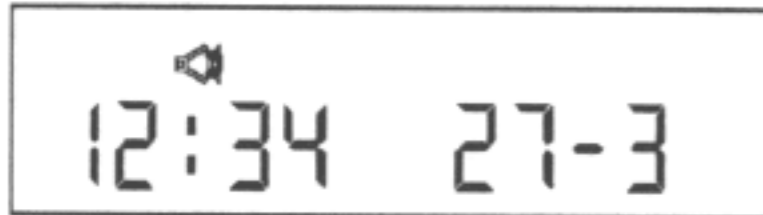

4.2 Turn off the pager.

When the pager is on standby mode, press the first

button until the display shows as below:




Press the second button, the pager will display the turn off status mode and the screen will display as below:



All the messages and time will be kept in the memory. And the pager can not receive any message.

4.3 Setting of Time and Date

4.3.1 Continue to press first button until the display shows as below:

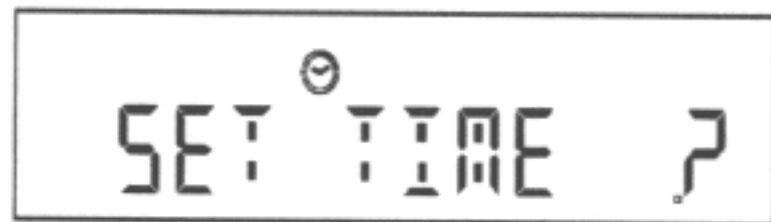

Press the second button to enter the time setting mode. The hour digit will blink, then press the first button to set the hour digit. After setting the hour digit, press the second button, the next digit will blink. Then you can press the first button to adjust. Repeat to move to the last digit, then the hour, then the minute, then AM/PM, then 24/12 Hr.

After setting the last digit, press the third button to confirm the time setting and the pager will return to standby mode.

4.3.2 Continue to press first button until the display shows as below:



Press the second button to enter the date setting mode. The month digit will blink, then press the first button to set the month digit. After setting the month digit, press the second button, the next digit will blink. Then you can press the first button to adjust. Repeat to move to the last digit, then the month, then the day, then the year. After setting the last digit, press the third button to confirm the time setting and the pager will return to standby mode.

4.4 Receive and store messages

When the pager receives a new message, the message will be stored in memory.

Below are some criteria for receiving messages:


- 4.4.1 The pager will store a maximum of 12 messages; each message can contain a maximum of 20 characters.
- 4.4.2 When pager receives a new message, the message will be automatically stored in memory. The pager will alert the user and display the new message.
- 4.4.3 The pager will display the content of received message and time received.
- 4.4.4. After receiving 12 messages, the old messages will be replaced with the new messages based on the first in first out regulation (except locked and unread messages).

4.4.5. When a duplicate message has been received, the time stamp will be updated.

4.5 Check messages

Press the third button to read the message.

4.5.1. If there is no new message the display will show as below:

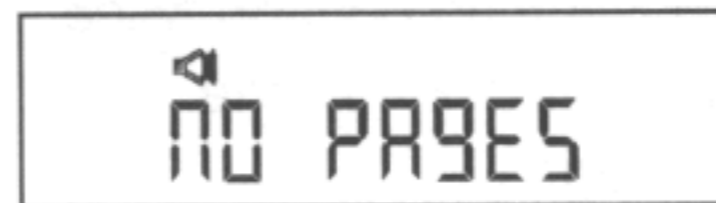


4.5.2. When a message has been received, press the third button to read the message. You can continue to press the third button to read the next message. Messages will be displayed on the first in last out regulation.

4.5.3. The pager will return to standby mode, if no buttons are pressed within 8 seconds.

4.6 Lock and delete and unlock messages

4.6.1 Lock and delete messages

When reading messages, press the first button, **PROTECT** will be displayed. Press the second button to lock the message, then the protect icon () will be displayed. Press the first button twice and the **DELETE** will be displayed. Press the second button to delete messages.

4.6.2 Unlock messages

When reading protected messages, press the first button, **UNPROTECT** will be displayed. Press the second button to unlock the message.

4.7 Function setting

4.7.1. Sound setting

When the pager is on standby mode. Press first button until the display shows as below:



Press the second button enter sound setting mode. The pager will sound the set sound. Press the first button to adjust different sound.

4.7.2. When the pager is on standby mode, press the first button until the display shows as below:



Press second button, to enter the alert mode, and the display will show as below:



Press the first button to adjust to vibration alert method (**MOTOR**). Press the first button again to adjust to silent method (**MUTE**). When you set silent mode, the pager can not alert.

4.7.3. Alarm setting

Press the first button until display shows **SET ALARM?**, and then press the second button, Press the first button to select alarm to be set (**1-3**). Press second button to confirm, press first to select --/**ON** mode. Press second button to confirm ON/OFF alarm. Press first button to adjust the hour digit. Repeat to move to the last digit, then the hour, then the minute. After setting the last digit, press the third button to confirm the time setting and the pager will return to standby mode.

Table of Contents

1. External view of pager
2. Function of pager
3. Description of different display mode
 - 3.1 Standby display mode and with sound alert
 - 3.2 Unread message display
 - 3.3 Vibration alert display
 - 3.4 Silent alert display
 - 3.5 No message receive display
 - 3.6 Out of receiving area display
 - 3.7 Low battery indication